

ASSEMBLY INSTRUCTIONS


Keil Large Swing Arm Wall Light Item # ARN2651

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

Portable assembly

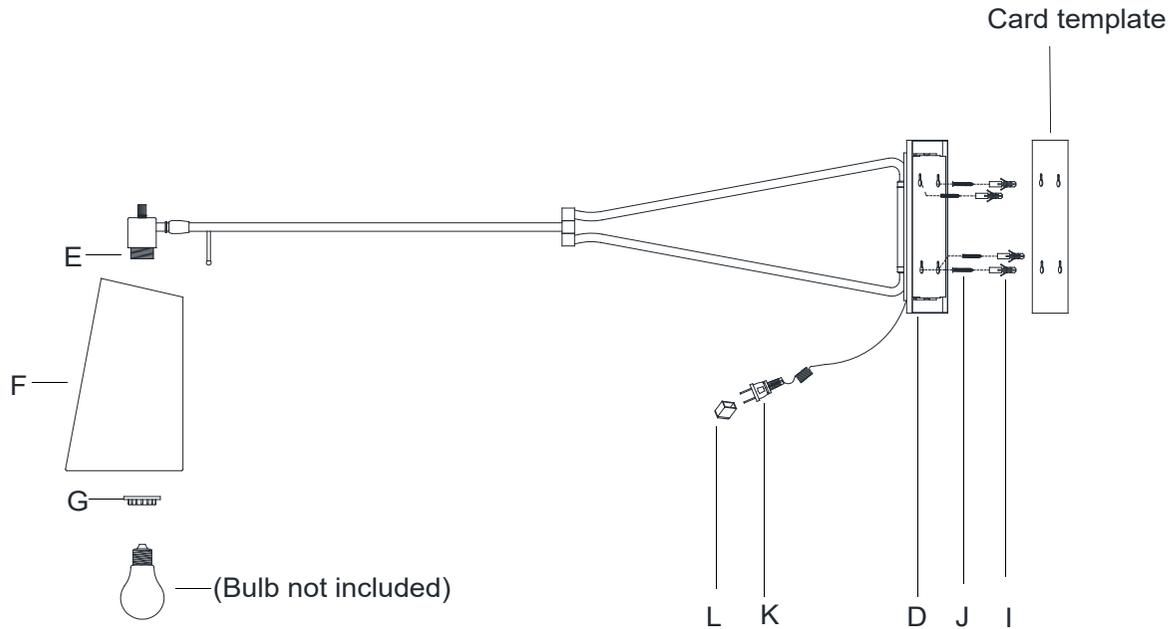

1. Carefully remove all parts from the box.
2. Put the card template to the desired location and mark the key hole points on the wall.
3. Remove the card template and drill holes on the wall and insert the anchors (I) into the holes.
4. Insert the wood screws (J) to the anchors (I) and leave the threads 1/8" out.
5. Hook the backplate (D) to the wood screws (J).
6. Remove the socket ring (G) from the socket (E), then attached the shade (F) to the socket (E) and secure with the socket ring (G).
7. Insert bulbs (not included) into the sockets.
8. Remove the protective plug cover (L) from the plug (K).
9. Plug into a proper electrical outlet and test the fixture.
10. Swing the arms to desired angle.


***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.



VISUAL COMFORT & Co.

ASSEMBLY INSTRUCTIONS

Hardwire assembly

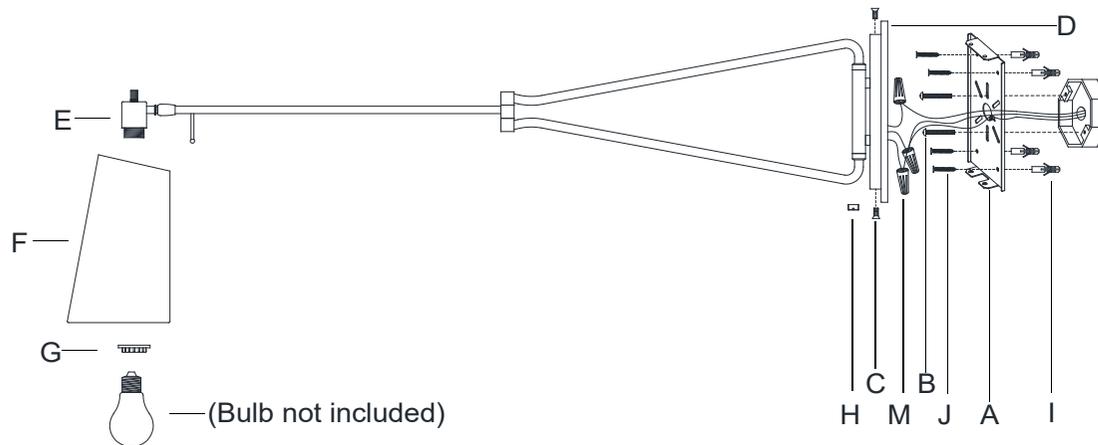

Keil Large Swing Arm Wall Light

Item # ARN2651

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

1. Carefully remove all parts from the box.
2. Remove the portable mounting plate from the backplate (D) by loosening the side screws (C).
3. Put the fixed mounting plate (A) on the wall, mark the anchor holes position with pencil (not included). Drill holes on the wall and insert the anchors (I) into the holes.
4. Attach the fixed mounting plate (A) to the junction box and secure with the mounting screws (B), then secure the wood screws (J) into the anchors (I).
5. Measure the fixture wires then cut. Be certain to leave enough length to connect the wires in the junction box.
6. Strip the insulation on the fixture wires about 5/8".
7. Insert the direct wire plug (H) into the wire exit on the bottom of the backplate (D).
8. Wrap the fixture ground wire to the green ground screw on the fixed mounting plate (A) and secure, then connect to the ground wire in the junction box using the wire nut (M).
IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
9. Connect the fixture white wire to the neutral wire in the junction box using the wire nut (M).
10. Connect the fixture black wire to the hot wire in the junction box using the wire nut (M).
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
11. Install the backplate (D) to the fixed mounting plate (A) and secure with the side screws (C).
12. Remove the socket ring (G) from the socket (E), then attached the shade (F) to the socket (E) and secure with the socket ring (G).
13. Insert bulb (not included) into the socket.
14. Swing the arms to desired angle.
15. Installation is complete, turn on power at fuse or circuit breaker.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.



VISUAL COMFORT & Co.